
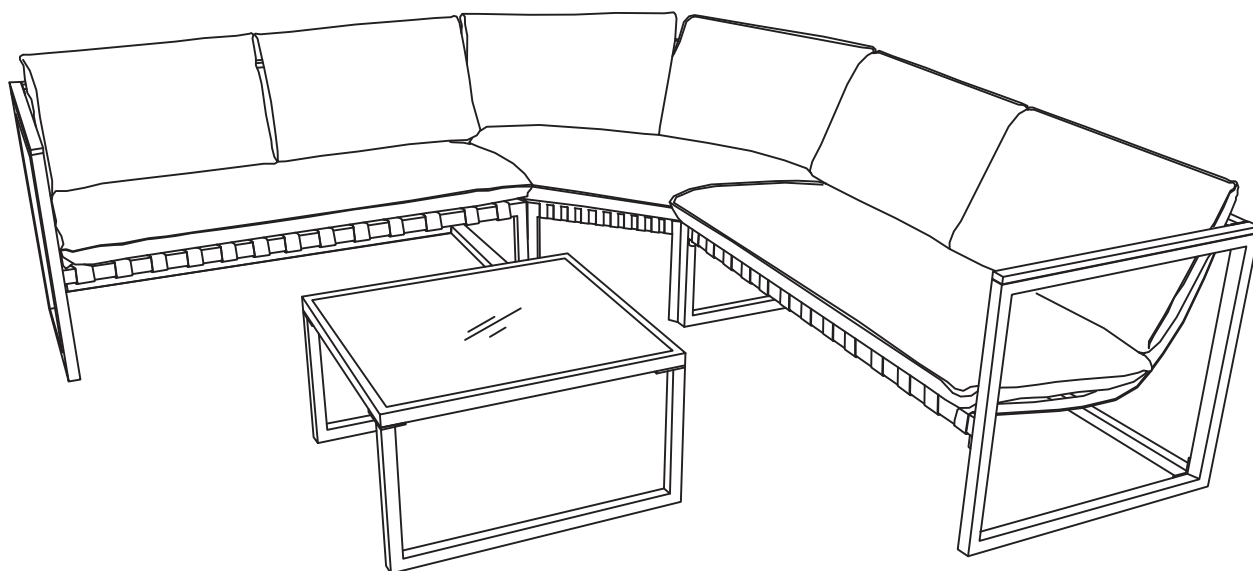




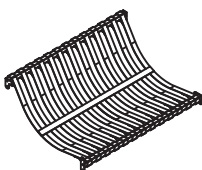
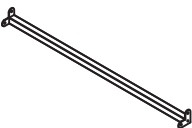
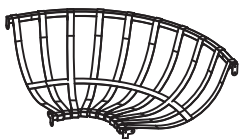
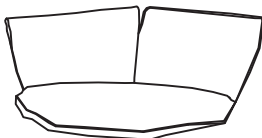
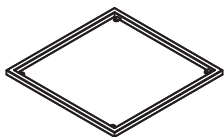
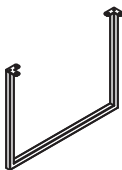




ASSEMBLY INSTRUCTION

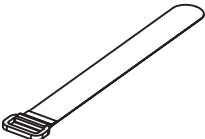


Box 1/1:


A Right  (1 pc)	B Left  (1 pc)	K  (2 pcs)	O Right  (2 pcs)
P Left  (2 pcs)	Q  (1 pc)	R  (1 pc)	S  (2 pcs)
T  (1 pc)	U  (1 pc)	V  (1 pc)	W  (1 pc)
X  (1 pc)	Y  (2pcs)	Z  (1 pc)	AA  M6*20 (44 pcs)
BB  Ø6 (44pcs)	CC  S=4 (2pcs)	DD  (4pcs)	

Don't tight all screws before assemble completely


1



Ax1



Px1

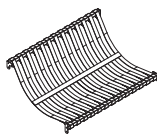

Rx1



Sx1



M6*20



Q6




S=4


AAx11

BBx11


CCx1

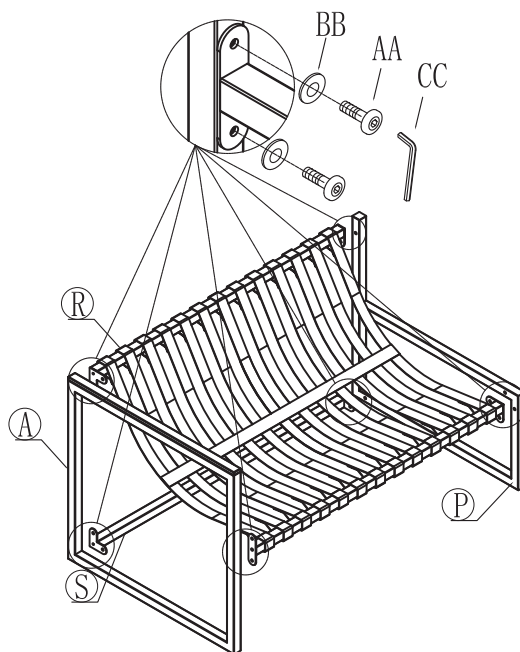


2



Bx1



Ox1

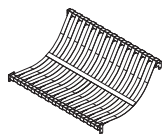

Qx1



Sx1



M6*20



Q6




S=4



AAx11

BBx11



CCx1

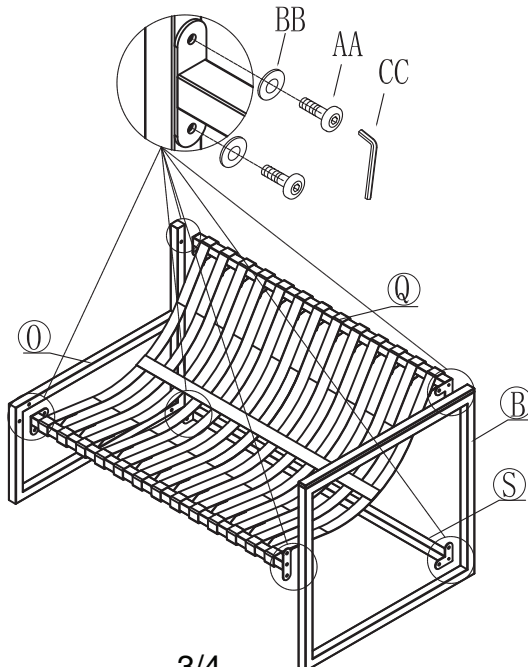


3

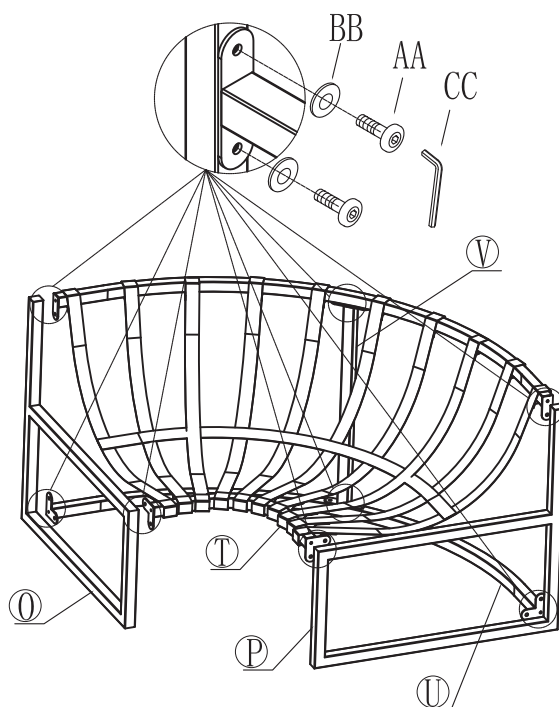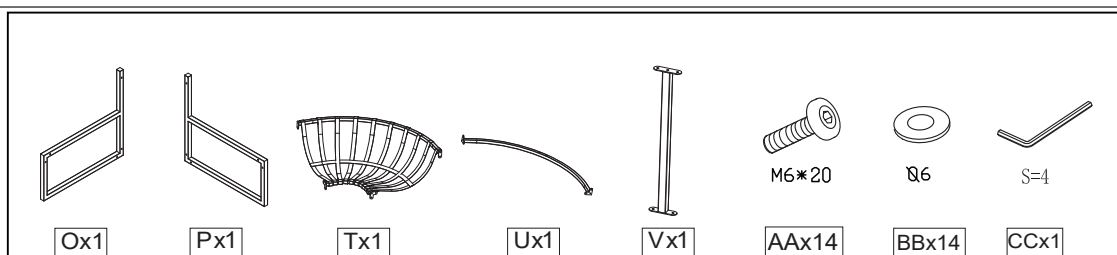

4

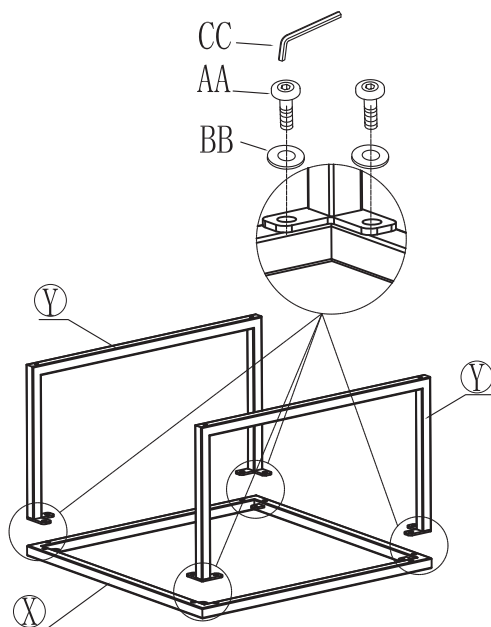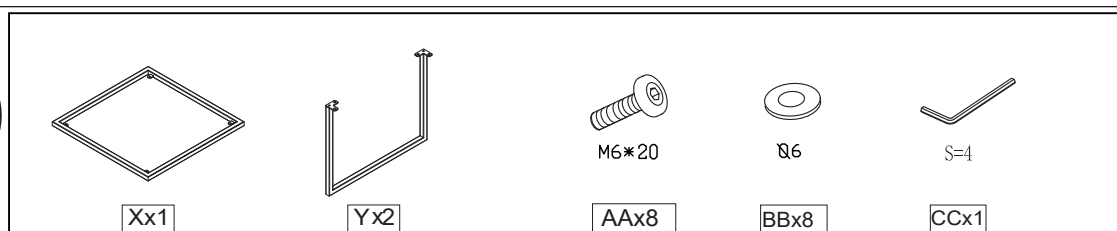


5





DDx4

DD

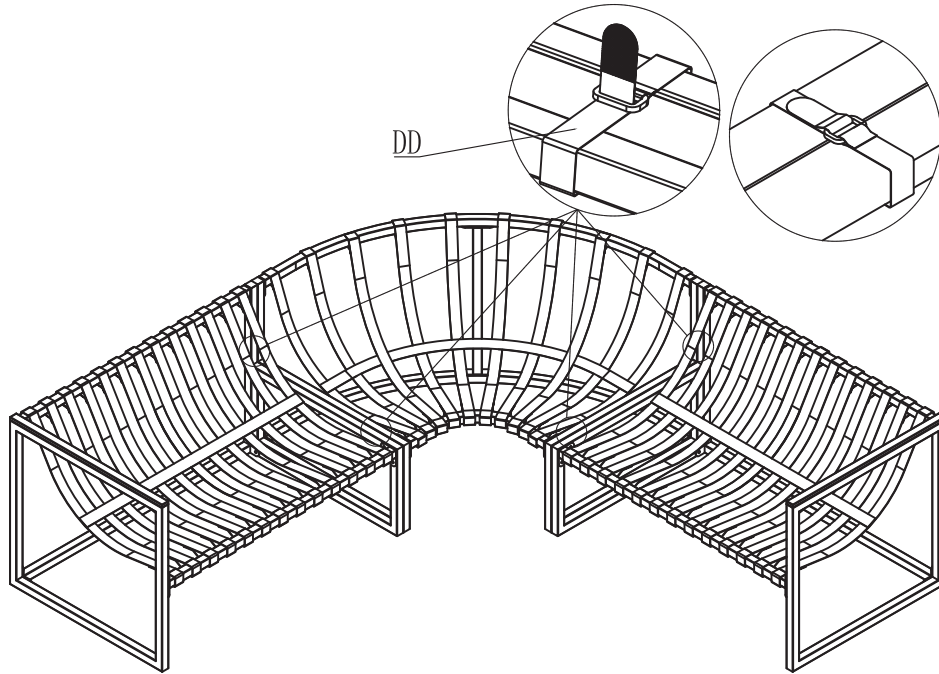

6



Kx2

Wx1

Zx1

